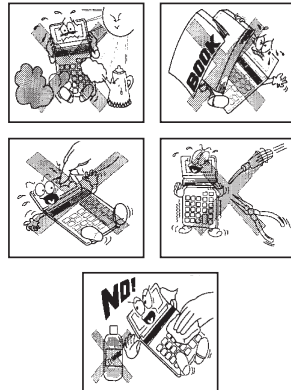 




CALCULATION / 运算 	OPERATION / 操作 	DISPLAY / 显示
▼ 混合运算 / Mixed		
140-35+22=127	140 \ominus 35 \oplus 22 \equiv	(127.00)
2x2 $\textcircled{\ominus}$ =6	2 \times 2 $\textcircled{\ominus}$ 3 \equiv	(6.00)
-7x9 $\textcircled{\ominus}$ =-63	7 \ominus \times 99 \rightarrow \equiv	(-63.00)
(2+4)3x8.1=16.2	2 \oplus 4 \oplus 3 \times 8.1 \equiv	(16.20)
▼ 常算运算 / Constant		
2+3=5	2 \oplus 3 \equiv	(5.00)
4+3=7	4 \oplus 3 \equiv	(7.00)
1-2=-1	1 \ominus 2 \equiv	(-1.00)
2-2=0	2 \ominus 2 \equiv	(0.00)
2x3=6	2 \times 3 \equiv	(6.00)
2x4=8	2 \times 4 \equiv	(8.00)
6+3=2	6 \oplus 3 \equiv	(2.00)
9+3=3	9 \oplus 3 \equiv	(3.00)
▼ 份数 / Power, Fraction		
3 ⁴ =81	3 \times \equiv \equiv \equiv \equiv	(81.00)
1/5=0.2	1 \div 5 \equiv	(0.20)
1/(2x3+4)=0.1	2 \times 3 \oplus 4 \div 1 \equiv	(0.10)
▼ 相反 / Inverse		
10 \div 5 = 2	10 \div 5 \equiv	(0.50)
5 + 10 = 0.5	5 \oplus 10 \equiv	(0.50)
▼ 附加模式运算 / Add Mode		
\$14.90+\$0.35-\$1.45=13.80	1490 \oplus 35 \ominus 145 \equiv	(13.80)
▼ 浮动运算 / Floating Calculation		
8+3x3.7+9=18.8666666666	8 \oplus 3 \times 3.7 \oplus 9 \equiv	(18.8666666666)
▼ 相互运算 / Reciprocal Calculation		
1/7=0.14285714285	1 \div 7 \equiv	(0.143)
▼ 向上圆正 / Round-up		
28+3=9.3333333333	28 \oplus 3 \equiv	(9.34)
▼ 四舍五入 / Round-off		
11+3=3.6666666666	11 \oplus 3 \equiv	(3.67)
▼ 向下圆正 / Round-down		
11+3=3.6666666666	11 \oplus 3 \equiv	(3.66)
▼ 百分比 / Percentage		
1,200x $\frac{12}{100}$ =144	1200 \times 12 $\textcircled{\%}$	(144.00)
1,200x $\frac{15}{100}$ =180	15 $\textcircled{\%}$	(180.00)
1,200+(1200x20%)=1,440	1200 \oplus 20 $\textcircled{\%}$	(1440.00)
1,200-(1200x20%)=960	1200 \ominus 20 $\textcircled{\%}$	(960.00)

▼ 增加运算 / Mark-Up		
Cost \$2,000 Profit=20% of Selling Price Selling Price=? (\$2,500) Profit=? (\$500)	2000 \oplus 20 $\textcircled{\text{MU}}$ $\textcircled{\text{MU}}$	(2500.00) (500.00)
▼ 减少运算 / Mark-Down		
Selling Price \$2,400 Profit=20% of Cost Cost=? (\$2,000) Profit=? (\$400)	2400 \oplus 20 $\textcircled{\text{MU}}$ $\textcircled{\text{MU}}$	(2000.00) (400.00)
▼ 记忆运算 / Memory		(0.)
3x4= 12	3 \times 4 $\textcircled{\text{M}}$	(M 12.00)
→) 60.2= 30	6 \oplus 2 $\textcircled{\text{M}}$	(M 30.00)
-18	$\textcircled{\text{M}}$ \ominus 18 \equiv	(M -18.)
+)	200 $\textcircled{\text{M}}$	(M 200.00)
182	$\textcircled{\text{M}}$ $\textcircled{\text{R}}$ (Recall Memory)	(M 182.)
	$\textcircled{\text{M}}$ $\textcircled{\text{C}}$ (Clear Memory)	(182.)
▼ 总计运算 / Grand total		(0.)
30x40=1,200	30 \times 40 \equiv	(GT 1200.00)
50x60=3,000	50 \times 60 \equiv	(GT 3000.00)
+)	25 \times 30 \equiv	(GT 750.00)
4,950	$\textcircled{\text{GT}}$	(GT 4950.)
+)	235 \times 35 \equiv	(GT 8225.00)
13,175	$\textcircled{\text{GT}}$ (Grant Total)	(GT 13175.)
	$\textcircled{\text{GT}}$ (Clear Grand Total)	(13175.)
▼ 溢出 / Overflow		
1) 123456789x78900 =9740740652100 (溢出/ERROR)	123456789 \times 78900 \equiv $\textcircled{\text{E}}$	(E 9.74074065210) (9.74074065210)
2) 6+0=0 (溢出/ERROR)	6 \oplus 0 \equiv $\textcircled{\text{E}}$	(E 0.) (0.)

操作注意事项 Taking Care of Your Calculator



 
■ 在使用本产品前, 请务必先仔细阅读本产品使用说明书。


电源

 
本计算器配有两种电源。太阳能及硷性电池。
锂电池的使用时间完全取决于个别的使用情况。
电池耗尽后, 您仍然可使用太阳能电池给计算器供电。
(注: 不要试图自行更换电池, 请到佳能维修服务中心, 专业人员为您更换电池。)

■ 电磁干扰或静电放电可引起显示故障或内存中的内容丢失或改变。若出现此情况, 请按 \square 键重新开始计算。


小数点选择开关

 : 用设定连计算结果小数点的位置 (+ 4 3 2 0 F)。

 + (加模式) : 进行加减运算的时候, 此机会自动把数目转化成两位小数。

 F (合并小数点) : 所有不超过12位的有效数字都会显示出来。

四舍五入选择开关

 用作把小数化为入小数 (\uparrow), 整数 (5/4), 或舍小数 (\downarrow) 可预先运算结果的小数位置。

溢出功能

出现下述情况时, 显示幕上将显示出“E”字样。键盘被以电子方式锁定, 无法进一步进行运算。按下 \square 键可清除溢出。

1. 输入数字, 计算结果或存储内容超过12位数字。
2. 进行除以“0”的计算。

规格

电 源: 太阳能电池及硷性电池 (LR44x1)

自动断电: 约**7分钟**

操作温度: 0 至 40 度 (华氏 32 至 104 度)

体 积: 199毫米 (长) x 140毫米 (宽) x 34 毫米 (高)

重 量: 212克

(规格如有改动恕不另行通知)

佳能电产香港有限公司

香港新界葵涌货柜码头路八十二至一百号
永得利广场第一期十七楼

北京博怡嘉业科技股份有限公司

北京西城区西直门外大街1号院T2号11层C11-C12

 
POWER SUPPLY


This calculator comes with a dual power source, solar cell and alkaline battery.
The battery life will depend on usage. When the battery is exhausted, you can still use the solar cell to power the calculator.

(Note: Do not attempt to change the battery by yourself. Have a Canon Service Center change the battery for you).

■ Electromagnetic interference or electrostatic discharge may cause the display to malfunction or the contents of the memory to be lost or altered. Should this occur, press the \square key and re-start your calculation from the beginning.

 
DECIMAL POINT SELECTOR SWITCH

 : Used for designating the decimal point position (+ 4 3 2 0 F) for calculated results.

 + (Add-Mode) : Addition and subtraction functions are performed with an automatic 2-digit decimal. It is convenient for currency calculations.

 F (Floating Decimal Point) : All effective numbers up to 12 digits are displayed.

ROUNDING SWITCH

 Used for round-up [\uparrow], round-off [5/4] or round-down [\downarrow] to the pre-selected decimal digits in the result.

OVERFLOW FUNCTIONS

In the following cases, "E" will be shown on the display. The keyboard is electronically locked, and further operation is impossible. Press \square to clear the overflow.

1. The key input, result or the memory content exceeds 12 digits to the left of the decimal point.
2. Dividing by "0".

SPECIFICATION

Power Source: Solar Cell and alkaline battery (LR44 x 1)

Automatic power-off function: Approx. **7 minutes**

Usable Temperature : 0°C to 40°C (32°F to 104°F)

Dimensions: 199mm (L) x 140mm (W) x 34mm (H)

7-51/64" (L) x 5-33/64" (W) x 1-11/32" (H)

Weight: 212g (7.17oz)

(Subject to change without notice)