# Canon

# **WS-1210Hi III**

Calculator



INSTRUCTION E

# **Calculation Examples**

CALCULATION	OPERATION		DISPLAY	
+ = × ÷			123426789012	
<b>▼</b> Mixed	1.5/4 7	(	0.)	
140-35+22=127	140 🚍 35 🚼 22 🚍	(	127.00)	
2x <del>2</del> ③=6	2 🗶 2 등 3 😑	(	6.00)	
_7x9 <del>-9</del> =_63	7 🔁 🔀 99 🗗 🖨	(	- 63.00)	
(2+4)÷3x8.1=16.2	2 + 4 + 3 <b>X</b> 8 • 1 =	(	16.20)	
▼ Constant				
2+ <u>3</u> =5	2 🖨 3 🖨	(	5.00)	
4+ <u>3</u> =7	4	(	7.00)	
1– <u>2</u> =–1	1 🗖 2 🖨	(	<b>–</b> 1.00)	
2 <u>-2</u> =0	2	(	0.00)	
<u>2</u> x3=6	2 🛛 3 🚍	(	6.00)	
<u>2</u> x4=8	4 🖨	(	8.00)	
6÷ <u>3</u> =2	6 <b>🖨</b> 3 🚍	(	2.00)	
9÷ <u>3</u> =3	9	(	3.00)	
<b>▼</b> Power, Fraction				
3 <sup>3</sup> =27	3 <b>X 😑 😑</b>	(	27.00)	
1/2=0.5	2 🖨 🖨	(	0.50)	
1/(2x3+4)=0.1	2 <b>X</b> 3 <b>+</b> 4 <b>+ =</b>	(	0.10)	
▼ Square Root				
$\sqrt{3} = 1.73205080756$	3 🔽	(	1.73205080756)	
<b>▼ Reverse</b> 10 ÷ 5 = 2				
X	10 🖨 5 (RV) 🖨	(	0.50)	
$5 \div 10 = 0.5$		(	0.00)	
▼ Floating Calculation ::::::::				
8÷3x3.7+9	8 <b>3 3 3 3</b>			
=18.866666666	7 😝 9 🖨	(	18.8666666666)	
▼ Add Mode	+ 4 3 2 0 F			
\$14.90+\$0.35-\$1.45 =13.80	1490 <b>1</b> 35 <b>1</b> 145 <b>1</b>	(	13.80)	
▼ Round up	1.5/4 7 + 4.3 2 0 F			
28÷3=9.333333333333	_	(	9.3334)	

CALCULATION OPERATION DISPLAY	7
<b>₩</b> ₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩₩	
	312
▼ Round off	
11÷3=3.66666666666 11 🖶 3 🖨 ( 3.	.6667)
▼ Round-down : 5/4 ?:	
11÷3=3.66666666666	.6666)
▼ Percentage   † 5/7 † :::::::	
1200+(1200x20%) =1,440	40.00)
1200-(1200x20%) =960	60.00)
▼ Memory (	0.)
	12.00)
1 — I	30.00)
1	-18.) 00.00)
182 (Recall Memory) (M	182.)
( ( ( Cim) (Clear Memory)	182.)
▼ Grand Total ON CA (	0.)
	00.00)
+) 50x60=3,000 50 <b>★</b> 60 <b>□</b> (GT 3'0)	00.00)
	4'200.)
	25.00)
(Clear Crand	2'425.)
GT (Clear Grand ( 12	2'425.)
▼ Tax Calculation	
Tax Rate Set         5 RATE         SET         (         TAX	<sup>5</sup> 5.)
Add the Tax Amount Price \$2,000 without tax 2000 (TAX+) ( 2'1	TAX+
TAX	(00.00)
Tax = (\$100)	00.00)
Deduct Tax Amount     Selling price \$3,150 with tax   3150 TAX- ( 3'0	TAX- (00.00)
TAX	50.00)
Recall Tax Rate RECALL ( TAX	<sup>(%</sup> 5.)
▼ Mark-up/down	
Mark-up:	
	00.00)
Profit=20% of selling price   MU   ( 5   Selling price = ? (\$2,500)	20.00)
Profit = ? (\$500)	
Mark-down:   Selling price = \$2,400	00.00)
Profit=20% MU ( 4	00.00)
Cost = ? (\$2,000) Profit = ? (\$400)	
▼ Overflow	
,	
1) 123456789x78900 123456789 <b>X</b> 78900 <b>(</b> E 9.7407406	
	55210)
1) 123456789x78900	0.) 0.)

### INFORMATION

· Before using this product, please read this manual carefully. And keep it on hand for future reference.



- 1) Avoid using, placing or storing the calculator in places subject to strong sunlight, rapid temperature change, humid or dusty areas.
- 2) Use a dry cloth to clean the casing of the unit. Do not use water, organic solvents or detergents.
- 3) Avoid using the calculator in places where there are iron filings, as this may affect the electrical circuits of the calculator.
- 4) Do not twist or bend the calculator.
- 5) Do not attempt to open the calculator.
- 6) Do not let the product come into contact with water or other liquids.

# **POWER SUPPLY**

This calculator has two power sources: battery and solar. The duration of the battery depends on individual usage.

(Note: Do not attempt to change the battery. Please have a Canon Service Center technician to change the battery.)

Electromagnetic interference or electrostatic discharge may cause the display to malfunction or the contents of the memory to be lost or altered. Should this occur, press the  $\frac{|ON|}{CA}$  key and re-start your calculation from the beginning.

#### **AUTOMATIC POWER-OFF FUNCTION**

When the power is turned "ON" and none of the keys are pressed for more than 7 minutes, the calculator turns off automatically to save power. Press [ON] key to re-start the calculator.

#### DECIMAL POINT SELECTOR SWITCH

+ 4 3 2 0 F

Used for designating the decimal point position (+ 4 3 2 0 F) for calculated results.



+ (Add-Mode): Addition and subtraction functions are performed with an automatic 2-digit decimal. This mode is convenient for currency calculations.



F (Floating Decimal Point): All effective number up to 12 digits are printed or displayed.

## **ROUNDING SWITCH**



Used to round-up [ ↑], round-off [5/4] or round-down [ ] to the pre-selected decimal digits in the result.

# **GRAND TOTAL FUNCTION**



The totals are accumulated in the grand total memory. Press GT to get the grand total. Press GT twice to clear the grand total memory.

# **TAX FUNCTION**

RATE SET

Store the Tax Rate: Enter the tax rate amount, then press RATE To store.

RATE

Recall the Tax Rate: Press RATE to recall the stored tax rate.

TAX+

Add Tax Key: Used to add the tax amount to the displayed figure.

TAX-

Deduct Tax Key: Used to deduct the tax amount from the displayed figure.

## OVERFLOW FUNCTIONS

In the following cases, error message (E) will be shown on the display. The keyboard is electronically locked, and further operation is impossible. Press b to clear the overflow. The overflow occurs when:

- 1) The result or the memory content exceeds 12 digits to the left of the decimal point.
- 2) Dividing by "0".

## **SPECIFICATIONS**

Power Source: Solar cell and alkaline battery (LR44 x 1)

Operating Temperature: 0°C to 40°C

Dimension: 198mm(L) x 150mm (W) x 38mm (H)

Weight: 263a

All specifications and contents of this instruction are subject to change without notice

# **CANON ELECTRONIC BUSINESS MACHINES** (H.K.) CO., LTD.

17/F., Tower One, Ever Gain Plaza, 82-100 Container Port Road, Kwai Chung, New Territories, Hong Kong

#### CANON AUSTRALIA PTY, LTD.

1 Thomas Holt Drive, North Ryde, NSW 2113 Australia

Tel: 13 13 83

Website: www.canon.com.au

#### CANON NEW ZEALAND LTD.

Akoranga Business Park, Northcote, Auckland, New Zealand

Tel: 0800 222 666

Website: www.canon.co.nz

© CANON ELECTRONIC BUSINESS MACHINES (H.K.) CO., LTD. 2013 Printed in China / Made in China E-IE-466