




## INSTRUCTIONS

使用说明书  
설명서

PRINTED IN CHINA  
PUB E-IM-2332

### CALCULATION EXAMPLE

### 计算实例 계산 예

Calculation 	Operation 	Display 
<b>▼ Mixed</b> 140-35+22=127 2x-2 3=6 -7x9=-63 9+5x3.2+7=12.76 (2+4)+3x8.1=16.2	$\text{ON}$ 140 $\text{=}$ 35 $\text{-}$ 22 $\text{=}$ 2 $\text{=}$ 2 $\text{=}$ 3 $\text{=}$ 7 $\text{=}$ 9 $\text{=}$ 9 $\text{=}$ 5 $\text{=}$ 3 $\text{=}$ 2 $\text{=}$ 7 $\text{=}$ 2 $\text{=}$ 4 $\text{=}$ 3 $\text{=}$ 8 $\text{=}$ 1 $\text{=}$	( 0.) ( 127.) ( 6.) ( - 63.) ( 12.76) ( 16.2)
<b>▼ Constant</b> 2+3=5 4+3=7 1-2=-1 2-2=0 5x3=15 5x4=20 6+3=2 9+3=3	2 $\text{=}$ 3 $\text{=}$ 4 $\text{=}$ 1 $\text{-}$ 2 $\text{=}$ 2 $\text{-}$ 5 $\text{=}$ 3 $\text{=}$ 4 $\text{=}$ 6 $\text{+}$ 3 $\text{=}$ 9 $\text{+}$ 3 $\text{=}$	( 5.) ( 7.) ( - 1.) ( 0.) ( 15.) ( 20.) ( 2.) ( 3.)
<b>▼ Power, Fraction</b> 3 <sup>3</sup> =27 1/2=0.5	3 $\text{=}$ $\text{=}$ 2 $\text{=}$ $\text{=}$	( 27.) ( 0.5)
<b>▼ Square Root</b> $\sqrt{3}$ =1.7320508	3 $\sqrt{\text{=}}$	( 1.7320508)
<b>▼ Percentage</b> 1,200x12%=144 200+(200x20%)=240 200-(200x20%)=160	1200 $\text{=}$ 12 $\text{=}$ 200 $\text{=}$ 20 $\text{=}$ 200 $\text{-}$ 20 $\text{=}$	( 144.) ( 240.) ( 160.)
<b>▼ Memory</b> $3 \times 4 = 12$ $-) 6 + 0.2 = 30$ $-18$ $+) 200$ $182$	$\text{MC}$ $\text{MR}$ $\text{ON}$ 3 $\text{=}$ 4 $\text{=}$ $\text{M} \pm$ 6 $\text{=}$ 20 $\text{=}$ $\text{M} \pm$ $\text{MC}$ 200 $\text{=}$ $\text{M} \pm$ $\text{MR}$ (Recall Memory) $\text{MC}$ (Clear Memory)	( 0.) (M 12.) (M 30.) (M - 18.) (M 200.) (M 182.) ( 182.)
<b>▼ Overflow</b> 1) 123456x7890 =974067840 (ERROR) 2) 6+0=0 (ERROR)	123456 $\text{=}$ 7890 $\text{=}$ $\text{ON}$ 6 $\text{+}$ 0 $\text{=}$ $\text{ON}$	(E 9.7406784) ( 0.) (E 0.) ( 0.)

## POWER SUPPLY

This calculator comes with a dual power source. Generally, under normal room lighting, the calculator is powered by a built-in solar cell. When the light level drops below a certain point, it will automatically switch over to battery power. The alkaline battery is long lasting, however the battery life will depend on usage. When the battery is exhausted, you can still use the solar cell to power the calculator.

**(Note:** Do not attempt to change the battery by yourself. Have a Canon Service Center change the battery for you.)

## AUTOMATIC POWER-OFF FUNCTION

When the power is turned "ON" and none of the keys are pressed for more than **8 minutes**, the calculator turns off automatically to save power. Press  $\text{ON}$  key to re-start the calculator.

■ Electromagnetic interference or electrostatic discharge may cause the display to malfunction or the contents of the memory to be lost or altered. Should this occur, press the  $\text{ON}$  key and re-start your calculation from the beginning.

## OVERFLOW FUNCTIONS

In the following cases, "E" will be shown on the display. The keyboard is electronically locked, and further operation is impossible. Press  $\text{ON}$  key to clear the overflow. The overflow occurs when:

 
 
 
1. The result or the memory content exceeds 8 digits.
2. Dividing by "0".

## SPECIFICATION

Power Source: Solar cell and Alkaline battery (LR1130 X 1)  
 Usable Temperature: 0°C to 40°C (32°F to 104°F)  
 Dimensions: 89mm (W) x 140mm (L) x 24mm (H) /  
 3-1/2" (W) x 5-33/64" (L) x 15/16" (H)  
 Weight: 83 g (2.9 oz)  
*(Subject to change without notice)*

## Taking Care Of Your Calculator

### 操作注意事项 계산 처리하기





## 电源

本计算器配有两种电源。硷性电池的使用寿命完全取决于个人的使用。电池耗尽后，仍可使用太阳能电池给计算器供电。


(注：勿试图自行更换电池，应请佳能服务中心专业人员为您更换电池。)

## 自动断电功能

在本机电源处于“ON”(意“开启”)状态下时，在**八分钟**以上的情况下不按任何键，计算器将会自动关闭电源以节电。欲重启计算器请按  键。此时显示幕上显示“0”字样。

■ 电磁干扰和静电放电会导致显示异常，或导致记忆内容丢失或被更改。若出现此情况，应按下  键重新计算。

## 溢出功能

出现下述情况时，显示幕上将显示出“E”字样。键盘被以电子方式锁定，无法进一步进行计算。按下  键可清除溢出。可导致溢出的情况如下：

1. 计算结果或存储内容超过8位元。
2. 进行除以“0”的计算。

## 规格

电源：太阳能电池及硷性电池(LR1130 x 1)

工作温度范围：0°C 到 40°C (32°F 到 104°F)

尺寸：89毫米(宽) x 140毫米(长) x 24毫米(高)

重量：83克

(规格如有改动恕不另行通知)

### CANON ELECTRONIC BUSINESS MACHINES (H.K.) CO., LTD.

17/F., Ever Gain Plaza, Tower One, 82-100 Container Port Road, Kwai Chung, New Territories, Hong Kong

### CANON EUROPA N.V.

Bovenkerkerweg 59-61, P. O. Box 2262, 1180 EG Amstelveen, The Netherlands

### CANON LATIN AMERICA, INC.

703 Waterfrod Way, Suite 400, Miami, FL33126, U. S. A.

### CANON INDIA LIMITED.

Neela Gagan, Mandi Road, Mehrauli, New Delhi - 110030, India

### CANON MARKETING (MALAYSIA) SDN BHD.

Block D, Peremba Square, Saujana Resort, Section U2, 40150 Shan Alam, Selangor Darul Ehsan, Malaysia

### CANON MARKETING (PHILIPPINES), INC.

Marvin Plaza Building, 2153 Don Chino Roces Avenue, Makati City, Philippines

### CANON MARKETING (SINGAPORE) PTE LTD.

1 Jalan Kilang Timor #09-00, Pacific Tech Centre, Singapore 159303

### CANON MARKETING (THAILAND) CO., LTD.

9-10th Floor, Bangkok City Tower, 179-34-45 South Sathorn Road, Thungmahamek, Sathorn Bangkok 10120, Thailand

### CANON MARKETING (HONG KONG) COMPANY LTD.


10/F, Mirror Tower, 61 Mody Road, Tsimshatsui East, Kowloon, Hong Kong


## 전원

이 계산기는 2중 전원입니다. 알카린 배터리의 수명은 전적으로 사용량에 따라 달라지며, 배터리 수명이 다한 후에도 태양전지가 필요 전력을 대체 공급합니다.


(주의사항: 본인이 직접 배터리를 교환하지 마시고, 캐논 서비스 센터의 전문 가에게 의뢰하십시오.)

## 자동 절전(Power-off) 기능

건전지 수명 연장을 위하여, 전원이 켜진 상태에서 아무런 기기조작이 없을 경우 **8분이** 지나면 자동으로 전원이 차단됩니다. 사용을 계속하시려면  키를 누르십시오. 디스플레이에 “0” 이 나타나면서 전원이 꺼집니다.

■ 간혹 전자기 방해나 방전으로 디스플레이 기능이 오동작을 일으키거나 메모리 데이터가 소실 또는 변형될 수 있습니다. 그런 경우에는  키를 누른 후 처음부터 다시 시작해 주십시오.

## 데이터 오버플로우(Overflow) 기능

아래와 같은 경우에는 화면에 “E”(에러) 표시가 나타나면서 키보드 입력이 불가능해집니다. 이때  키를 누르면 데이터 오버플로우가 없어지면서 키보드가 정상 입력상태로 되돌아 옵니다.

- 1) 계산 결과나 메모리에 저장된 숫자가 8 자리를 초과되었을 시.
- 2) 임의의 숫자를 0으로 나누었을 때.

## 제품 사양

전원: 태양전지 및 알카린 배터리(LR 1130x1)

적정온도: 0°C - 40°C (32°F - 104°F)

크기: 89 x 140 x 24 mm (W x L x H)

중량: 83 g

(제품 사양은 사전통지 없이 변경될 수 있음)