Canon



AS-220RTS

https://global.canon/calmanual

Calculator



INSTRUCTION E

Calculation Examples

CALCULATION	OPERATION	DISPLAY
 		123426789012
▼ Mixed	ON CA	(0.)
140-35+22=127	140 🚍 35 😝 22 🚍	(127.)
2x2′3=6	2 🗶 2 🔡 3 🖨	(6.)
-7x99/=-63 (2+4)÷3x8.1=16.2	7 € X 99 → E 2 + 4 € 3 X	(-63.)
(=,	8 🖸 1 🖨	(16.2)
▼ Power, Fraction		
3 ⁴ =81	3 X 🖯 🖯 🖯	(81.)
1/5=0.2	5 🖨 🖯	(0.2)
1/(2x3+4)=0.1	2 🗙 3 🖶 4 🖨 🖨	(0.1)
▼ Constant		
2+ <u>3</u> =5	2 🖨 3 🖨	(5.)
4+ <u>3</u> =7	4 😑	7.)
1- <u>2</u> =-1	1 2 2 3 2	(-1.)
2 <u>-2</u> =0 2x3=6	2 🗱 3 🖨	(0.)
2x4=8	4 8	(8.)
6÷3=2	6 63 3 6	(2.)
9÷ <u>3</u> =3	9 🖪	(3.)
▼ Percentage		
1200+(1200x20%) =1,440	1200 🖶 20 🥦	(1'440.)
1200–(1200x20%) =960	1200 2 0 %±	(960.)
	1200 🕳 20 (02)	,
▼ Tax Calculation		\
Tax Rate Set	ON TAX+	(, TAX% 0.)
Tax Rate = 5%	5 TAX+ SET	(TAX% 5.)
Recall Tax Rate	ON TAX- RECALL	(TAX% 5.)
Add the Tax Amount		
Price \$2,000 without tax	2000	(2'000.)
Selling price with tax? (\$2,100)	TAX+ SET	(TAX+ 2'100.) (TAX 100.)
Tax amount? = (\$100)	TAX+ SET	(TAX 100.)
Deduct Tax Amount	0450	(04.53
Selling price \$3,150 with tax Price without tax? (\$3,000)	3150	(3'150.)
Tax amount? = (\$150)	TAX- RECALL TAX- RECALL	(TAX- 3'000.) (TAX 150.)
(\$100)	RECALL	[(150.)]

CALCULATION	OPERATION	DISPLAY
# = × ÷		123426789012
▼ Business Calculation Calculating Cost Selling Price: \$2,000 Profit Margin: 30% Cost =? (\$1,400)	2000 SELL 30 MARGIN	(SELL 2'000.) (COST 1'400.)
Calculating Selling Prior Cost: \$1,500 Profit Margin: 20% Selling Price=? (\$1,875)	ce 1500 cost 20 [margin]	(^{COST} 1'500.) (SELL 1'875.)
Calculating Profit Marg Cost: \$1,500 Selling Price: \$2,000 Profit Margin =? (25%) Margin Value =? (\$500)	in 1500 COST 2000 SELL MARGIN	(COST 1'500.) (MARGIN% 25.) (MARGIN 500.)
▼ Memory 3x4= 12 -) 6÷0.2= 30 -18 +) 200 182	©N (A M±) 3 13 4 M±) 6 12 12 M≡ EM (A Call Memory) EM (Clear Memory)	(0.) (_M 12.) (_M 30.) (_M -18.) (_M 200.) (_M 182.) (182.)
▼ Check & Correction Check (500+300–60)x5=3,700	500 🖨 300 🚍	(0.) (02 800.) (05 3'700.)
(500+300–60)x2=1,480 * Constant Calculation	60 X 5 = 2 = V	(05 3700.) (07 1480.) (01 сческ 500.) (02 сческ 300.) (03 сческ 60.) (04 сческ 5.) (05 сческ 3700.) (06 сческ 2.)
Correct "+300" to "-200 (500+300-60)x <u>5</u> =3,700	▼	(07 CHECK K 1/480.)
(500+300−60)x <u>2</u> =1,480	©RRECT 200 CORRECT	(02 CHECK 300.) (02 CHECK 300.) (02 CHECK 200.) (03 CHECK 60.) (04 CHECK 5.) (05 CHECK 1'200.)
(500 –200 –60)x <u>5</u> =1,200 (500 –200 –60)x <u>2</u> = 480	▼ ▼	(06 check 2.) (07 check к = 480.)
▼ Overflow 1) 123456789x78900 =9740740652100 (ERROR) — ▼	123456789 X 78900	(_E 9.74074065210) (9.74074065210)
2) 6÷0=0 ** (ERROR)	6 () 0 ()	(E 0.)

INFORMATION

Before using this product, please read this manual carefully. And keep it on hand for future reference.



- 1) Avoid using, placing or storing the calculator in places subject to strong sunlight, rapid temperature change, humid or dusty areas.
- 2) Use a dry cloth to clean the casing of the unit. Do not use water, organic solvents or detergents.
- 3) Avoid using the calculator in places where there are iron filings, as this may affect the electrical circuits of the calculator.
- 4) Do not twist or bend the calculator.
- 5) Do not attempt to open the calculator.
- 6) Do not let the product come into contact with water or other liquids.

POWER SUPPLY

This calculator has two power sources: battery and solar. The duration of the battery depends on individual usage. (Note: Do not attempt to change the battery. Please

have a Canon Service Center technician to change the battery.)

Electromagnetic interference or electrostatic discharge may cause the display to malfunction or the contents of the memory to be lost or altered. Should this occur, press the key and re-start your calculation from the beginning.

AUTOMATIC POWER-OFF FUNCTION

When the power is turned "ON" and none of the keys are pressed for more than 7 minutes, the calculator turns off automatically to save power. Press ON key to re-start the calculator.

TAX FUNCTION

Store the Tax Rate: Press ON TAX+ and enter the tax rate amount, then press TAX+

Recall the Tax Rate: Press CA TAXrecall the stored tax rate.

Add Tax Key: Used to add the tax amount to the displayed figure.

Deduct Tax Key: Used to deduct the tax amount from the displayed figure.

BUSINESS CALCULATION

cost SELL MARGIN

Used for calculating the cost, selling price and profit margin amount. Enter the value of any 2 items to obtain the balance value item. (e.g. enter the value of the cost and the selling price to obtain the profit margin.)

CHECK AND CORRECT FUNCTION

This calculator has a 120 steps replay memory capacity which is useful for checking the calculation process. Input data can be edited by correcting the figures.



■ Used for reviewing the process of the calculation. Press ▲ ▼ key to review the previous or next calculation step.

- The step indicator shows the number of steps of the current calculation on display.
- When reviewing the process with \(\bigset \) key, "Percent", or "Constant" calculation will be displayed as "%", or "K" indicator.
- If a calculation exceeds 120 steps, the step indicator will blink; and further calculations will not be recorded within the replay memory.



- : Used for changing calculation contents in the Replay mode.
- The CORRECT function can only work up to 119 steps. No correction can be made after 119 steps.
- The (CORRECT) function is operative only for complete equations finished with "=".



: Press (AUTO) to scrolls through the calculation steps from beginning to end. And press (AUTO), ★ , ▼ to stop the auto check operation.

OVERFLOW FUNCTIONS

In the following cases, error message (E) will be shown on the display. The keyboard is electronically locked, and further operation is impossible. Press to clear the overflow. The overflow occurs when:

- The result or the memory content exceeds 12 digits to the left of the decimal point.
- Dividing by "0".

SPECIFICATIONS

Power Source: Solar cell and alkaline battery (LR44 x 1) Operating Temperature: 0°C to 40°C

Dimension: 150mm(L) x 134mm (W) x 36mm (H) Weight: 150g

All specifications and contents of this instruction are subject to change without notice

For Australia only



PRODUCT CONTAINS BUTTON/COIN CELL BATTERY Button/coin cell batteries are hazardous and must be kept out of reach of children at all times, whether new or used. These batteries can cause severe injuries if swallowed or placed inside any part of the body. If it is suspected a button/coin cell battery has been swallowed or placed inside any part of the body, seek medical attention immediately.

CANON ELECTRONIC BUSINESS MACHINES (H.K.) CO., LTD.

17/F., Tower One, Ever Gain Plaza, 82-100 Container Port Road, Kwai Chung, New Territories, Hong Kong



https://ebmhk.canon

CANON AUSTRALIA PTY, LTD.

Building A, The Park Estate, 5 Talavera Road, Macquarie Park, NSW 2113, Australia Tel: 13 13 83

Website: www.canon.com.au

CANON NEW ZEALAND LTD.

Akoranga Business Park, 28 The Warehouse Way, Northcote. Auckland 0627. New Zealand Tel: 0800 222 666

Website: www.canon.co.nz

© CANON ELECTRONIC BUSINESS MACHINES (H.K.) CO., LTD. 2022 Printed in China / Made in China F-IF-518