Canon



ENGLISH

F-717SGA

Scientific Calculator




F-IF-515

CONTENTS

DISPLAY (4-line Dot Matrix Display)	F	2. 3
GETTING STARTED		
Power ON, OFF	F	2. 4
Display Contrast Adjustment	F	2. 4
Mode Selection		
Calculator Set-up Menu		
Before Using the Calculator	F	P. 7
INPUTTING EXPRESSIONS AND VALUES		
Input Capacity		
Input Editing		
Inputting and Display result in MthIO Mode		
INPUT RANGE AND ERROR MESSAGE		
Calculation Precision, Input Range		
Order of Operations		
Calculation Stacks		
Error Message and Error Locator		
BASIC CALCULATIONS		
Arithmetic Calculations		
Memory Calculations		
Fraction Calculations		
Percentage Calculations		
Degree-Minutes-Seconds Calculations		
Reply & Multi-statements		
FUNCTIONAL SCIENTIFIC CALCULATIONS	P.	22
Square, Root, Cube, Cube Root, Power Root,		
Reciprocal and pi		
Logarithm, Natural Logarithm, Antilogarithm		
Angle Unit Conversion		
Trigonometry Calculations	P.	23
Permutation, Combination, Factorials and Random		
Number Generation		
Coordinate Conversion		
Absolute Value Calculations		
Engineering Notation		
Display Values Exchange		
STATISTICAL CALCULATIONS		
Statistical Type Setection		
Statistical Data Input		
Editing Statistical Sample Data		
Statistical Calculation Screen		
Statistical Menu		
Statistical Calculation Example	P.	33
BATTERY REPLACEMENT		
ADVICE AND PRECAUTIONS	P.	

How to use the Slide Cover

Open or close the cover by sliding as shown in the figure.

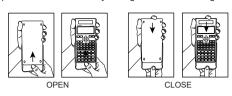

DISPLAY (4-line Dot Matrix Display)

sin
$$\left(\frac{\pi}{4}\right)$$
 + $\frac{\sqrt{2}}{2}$
1.414213562

<Status Indicators>

S : Shift key
A : Alpha key

M : Independent memory

STO : Store memory

RCL: Recall memory
STAT: Statistics mode

D : Degree Mode
R : Radian Mode
G : Gradient Mode

FIX : Fixed-decimal setting.

SCI : Scientific Notation

LINE : Line Display mode

: Up Arrow Down Arrow

Disp : Multi-statements Display

GETTING STARTED

Power ON, OFF

- First time operation:
- Pull out the battery insulation sheet, then the battery will be loaded.
- 2. Press ON SHIFT CLR 3 = CA to reset the calculator.

Power ON: When ON is pressed.

Power OFF: SHIFT OFF are pressed.

Auto Power off Function:

When the calculator is not used for about 7 minutes, it will automatically power off.

Display Contrast Adjustment

■ Press SHIFT SETUP (5 (5: (CONT ()), enter the Display Contrast Adjustment screen.



Press () to make the display contrast darken.

Press (to make the display contrast lighten.

Press CA or ON to confirm and clear the screen.

■ To initialize the LCD contrast, press ☐ 3 ☐ CA outside the Display Contrast Adjustment screen.

Mode Selection

- Press MoDE to enter the Calculation Mode Selection screen.
- Press 1, 2 to select the calculation mode.



Operation	Mode		LCD Indicator
MODE 1	COMP	Normal calculation	
MODE 2	STAT	Statistical calculation	STAT

Initial mode is COMP mode.

Calculator Set-up Menu

■ Press SHIFT strup to enter the Calculator Set-up Menu; press 🏈 / 🔕 for next / previous page.





1:ab/c 2:d/c 3:STAT 4:Disp 5:∢CONT▶

■ To select the calculator input & output format [1] MthIO or [2] LineIO

[1] MthIO - (Maths mode). Most of the input (e.g. Fraction, pi, square root number) are shown in Mathematics textbook format



And there are two "Result Format" (MathO or LineO) for selection. In MathO, fraction calculation result will be shown same as Input. In Lineo, fraction calculation result will be in line format

Result Format? 1:MathO 2:LineO

[2] LineIO – (Line mode): The majority of calculation input and output are shown in the lines format. And "LINE" icon will be shown.

Line mode \$\int(5+1)\(_{\text{(3-1)}}\)^\(\text{LINE}\)

1.224744871

For the STAT mode, the Input & Display format will switch to LineIO mode automatically.

■ To select the angle unit [3] Deg, [4] Rad or [5] Gra

[3] Deg: Angle unit in Degree

[4] Rad: Angle unit in Radian

[5] Gra: Angle unit in Gradient

$$90^{\circ} = \frac{\pi}{2}$$
 radians = 100grads

■ To select display digit or notation [6] Fix, [7] Sci or [8] Norm

[6] Fix: Fixed Decimal, [Fix 0~9?] appears, specify the number of decimal places by pressing [0] – [9].

Example: 220 ÷ 7 = 31.4286 (FIX 4) = 31.43 (FIX 2)

[7] Sci: Scientific Notation, [Sci 0~9?] appears, specify the number of significant digits by pressing [0] – [9].

Example: $220 \div 7 = 3.1429 \times 10^{1} \text{ (SCI 5)}$ = $3.143 \times 10^{1} \text{ (SCI 4)}$

[8] Norm: Exponential Notation, [Norm 1~2?] appears, specify the exponential notation format by pressing [1] or [2].

Norm 1: Exponential notation is automatically used for integer values with more than 10 digits and decimal values with more than **TWO** decimal points.

Norm 2: Exponential notation is automatically used for integer values with more than 10 digits and decimal values with more than NINE decimal places.

Example:
$$1 \div 1000 = 1 \times 10^{-3} \text{ (Norm 1)}$$

= 0.001 (Norm 2)

■ To select the fraction format [1] a b/c or [2] d/c

[1] a b/c: specify Mixed fraction display [2] d/c: specify Improper fraction display

■ To select the statistical display format [3] STAT ([1] ON or [2] OFF)

[1] ON: Show FREQ (Frequency) Column in Statistical Data Input Screen

[2] OFF: Hide FREQ (Frequency) Column in Statistical Data Input Screen

■ To select the decimal point display format [4] Disp ([1] Dot or [2] Comma)

- [1] Dot: specify dot format for Decimal point result display [2] Comma: specify comma format for Decimal point result display
- To Adjust Display contrast [5] ⓒ CONT ⓒ See "Display Contrast Adjustment" section.

Before Using the Calculator

■ Check the current Calculation Mode

Be sure to check the status indicators that indicate the current calculation mode (COMP, STAT), display formats setting and angle unit setting (Deg, Rad, Gra)

■ Return to initial setup

Pressing SHIFT CLR 1 (SET-UP) (YES) CA to return the initial calculator setup

Calculation mode : COMP

Input/Output Format : MthIO/MathO

Angle unit : Deg
Display Digits : Norm 2

Fraction Display Format : d/c
Statistical Data Input : OFF
Decimal Point format : Dot

This action will not clear the variable memories.

Initialize the calculator

When you are not sure of the current calculator setting, you are recommended to initialize the calculator (calculation mode "COMP", angle unit "Degree", and clear reply and variable memories), and LCD contrast by pressing ""

[3] (All) = (YES) [CA].

INPUTTING EXPRESSIONS AND VALUES

Input Capacity

F-717SGA allows you to input a single calculation up to 99 bytes. Normally, one byte is used as each time you press one of the numeric keys, arithmetic keys, scientific function keys or Ans. Some functions require 4 – 13bytes.

SHIFT ALPHA, and the direction keys will not use up any bytes. When input capacity is less than 10bytes, the input cursor will change from " \[\]" to " \[\]" that notifying the memory is running now.

Input Editing

- New Input begins on the left of display. If input data are more than 15 characters, the line will scroll to the right consecutively. You can scroll back to the left by using and to review the input
- In LineIO mode, press to let the cursor jump to the beginning of inputting, while will jump to the end.
- In MthIO mode, press to let the cursor jump to the beginning of inputting while it is at the end of the input calculation. Or press to let the cursor jump to the end of inputting while it is at the beginning of the input calculation.

Omit the multiplication sign and final close parenthesis.

Example: $2 \times \log 100 \times (1+3) = 16$

	Operation 1:	Display 1
Including X *1,	2 X log 1 0 0) X 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1	2xlog(100) x (1+3)
2,,,,	(1+3)= ↑ *3	16
	Operation 2:	Display 2
Omitting X *1,	2 log 1 0 0) (1	2log(100)(1+3
Omitting) *3	+3=	
		16

- *1. Omit multiplication sign (x)
 - Input before an open parentheses (: 1 x (2+3)
 - Input before scientific functions that includes parenthesis: 2 x cos(30)
 - Input before Random number function Rand
 - Input before Variable (A. B. C. D. X. Y. M), π. e
- *2. Scientific functions come with the open parenthesis. Example: sin(, cos(, Pol(, You need to input the argument and the close parenthesis).
- *3. Omit the last close parenthesis before the , M+, SHIFT sto.

■ Insert and overwrite Input mode

In LineIO mode, you can use INSERT or overwrite mode for inputting.

- In Insert mode (Default input mode), the cursor is a vertical flashing line " | " for inserting a new character.
- In overwrite mode, press key to switch the cursor to a flashing horizontal (_) and replace the character at the current cursor position.

In MthIO mode, you can only use the insert mode.

Whenever the display format changes from LineIO mode to MthIO mode, it will automatically switch to the insert mode.

■ Deleting and Correcting an Expression

In insert mode: Move the cursor to the right of the character or function that needs to be deleted, then press [DEL].

In overwrite mode: Move the cursor under the character or function being deleted, then press [DEL].

Example: 1234567 + 889900

(1) Replace an entry (1234567 → 1234560)

Mode Setting	Key In operation	Display (input Line only)
Method 1:	1234567 + 889900	1234567I+889900
LineIO/MthIO mode -	√ 7 times	
Insert mode	DEL 0	1234560I+889900
Method 2: LineIO mode -	SHIFT SET-UP 2	1234567+889900_
Overwrite mode	1234567 + 889900	
	SHIFT INS	
	€ 8 times	123456 <u>7</u> +889900
	0	1234560 <u>±</u> 889900

(2) Deletion (1234567 → 134567)

Method 1: LinelO/MthIO	€ 12times	12 34567+889900
mode - Insert mode	DEL	134567+889900
Method 2: LineIO	SHIFT INS	1234567+889900_
mode - Overwrite mode	€ 13times	1 <u>2</u> 34567+889900
	DEL	1 <u>3</u> 4567+889900

(3) Insertion (889900 → 2889900)

LinelO/MthIO mode -	€ 6times	1234567+ 889900
Insert mode	2	1234567+2 889900

Inputting and Display result in MthIO Mode

In MthIO Mode, the Input display of fraction or certain functions (log, x², x³, x ч, √≡, √≡, √□, x⁻¹, 10 ч, e ч, Abs) is shown in Mathematics textbook format

MthIO & MathO MODE : SHIFT SET-UP 1 1

Example in MthIO & MathO mode	Key in operation	Display
$\left \sqrt{3} - \frac{2}{\sqrt{2}}\right $	Abs	$\left \sqrt{3} - \frac{2}{\sqrt{2}} \right $ 0.3178372452

Remark

- Some input expressions cause the height of a calculation expression to be greater than one display screen. Maximum input capacity: 2 display screen (31 dots x 2).
- (2) Calculator memory limits how many functions or perentheses can be input in any single expression. In this case divide the expression into multiple parts and calculate separately.
- (3) If part of the expression you input is cut off after calculation and in the result display screen you can press () or () to view the full expression.

INPUT RANGE AND ERROR MESSAGE

Calculation Precision, Input Range

Number of Digits for Internal Calculation	Up to 18 digits
Precision*	±1 at the 10th digit for a single calculation. ±1 at the least significant for exponential display
Calculation Range	±1 × 10 ⁻⁹⁹ to ±9.999999999 × 10 ⁹⁹ or 0

■ Function Calculation Input Ranges

Functions		Input Range
	DEG	0 ≦ x <9×10 ⁹
sinx	RAD	0 ≦ x <157 079 632.7
	GRA	0 ≤ x <1x10 ¹⁰
	DEG	0 ≦ x <9×10 ⁹
cosx	RAD	0 ≦ x <157 079 632.7
	GRA	$0 \le x < 1x10^{10}$
	DEG	Same as sinx, except when x =(2n-1)×90
tanx	RAD	Same as sinx, except when x =(2n-1)×π /2
	GRA	Same as sinx, except when x =(2n-1)×100
sin ⁻¹ x	0 ≦ x ≦	1
cos-1x	0 -	''
tan ⁻¹ x	0 ≦ x ≦	9.999 999 999x10 ⁹⁹
sinhx	0< 4 <	220 259 500 2
coshx	0 ≤ x ≤ 230.258 509 2	
sinh ⁻¹ x	$0 \le x \le 4.99999999999999999999999999999999999$	
cosh-1x	1 ≤ x ≤ 4.999 999 999x10 ⁹⁹	
tanhx	0 ≦ x ≦	9.999 999 999x10 ⁹⁹
tanh ⁻¹ x	0 ≦ x ≦	9.999 999 999x10 ⁻¹
logx/lnx	0< x ≤ 9.999 999 999x10 ⁹⁹	
10 ^x	-9.999 999 999 x10 ⁹⁹ ≦x≦ 99.999 999 99	
e ^x	-9.999 999 999 x10 ⁹⁹ ≤ x ≤ 230.258 509 2	
√x	0 ≦ x <1x10 ¹⁰⁰	
X ²	x <1x10 ⁵⁰	
X ³	x ≦2.154 434 69x10 ³³	
X ⁻¹	x <1x100 ¹⁰⁰ ,x±0	
³ √x	x <1x10 ¹⁰⁰	
x!	0 ≦ x ≦ 69 (x is an integer)	
nPr	$0 \le n < 1x10^{10}, 0 \le r \le n \text{ (n,r are integers)}$	
	$1 \le \{n!/(n-r)!\} < 1x10^{100}$	
nCr	$0 \le n < 1x10^{10}, 0 \le r \le n $ (n,r are integers)	
51	1 ≦ n!/r!	$< 1x10^{100} \text{ or } 1 \le n!/(n-r)! < 1x10^{100}$

Functions	Input Range
Pol(x,y)	$ x , y \le 9.99999999099999999999999999999999999$
Foi(x,y)	$\sqrt{x^2+y^2} \le 9.99999999909990999999999999999999999$
Rec(r,θ)	$0 \le r \le 9.99999999099999999999999999999999999$
INEC(I,0)	θ : Same as sinx
	a ,b,c <1x10 ¹⁰⁰
	0 ≦ b,c
• • • • •	The display seconds value is subject to an error of
	+/-1 at the second decimal place
.	x <1x10 ¹⁰⁰
0 / //	Deciaml ← Sexagesimal Conversions
	0°0′0″ ≦ x ≦ 9999999°59′59″
	x>0: -1x10 ¹⁰⁰ < ylog x < 100
\ _V .	x=0: y>0
x'	x<0: y=n,m/(2n+1) (m,n are integers)
	However: -1x10 ¹⁰⁰ <ylog x <100< td=""></ylog x <100<>
	y>0: x≠0, -1x10 ¹⁰⁰ <1/x logy<100
x√v	y=0:x>0
, ,	y<0:x=2n+1,(2n+1)/m (m≠0;m,n are integers)
	However: -1x10 ¹⁰⁰ <(1/x)log y <100
a b/c	Total of integer, numerator, and denominator must be
a b/c	10 digits or less (including division marks).
RanInt#(a,b)	$0 \le a < 1x10^{10}$, $0 \le b < 1x10^{10}$ (a,b should be positive
Trailliu+(a,b)	integers or 0)
Ran#	Result generates a 3 digits pseudo random
I Vali#	number(0.000~0.999)
Abs	x <1x10 ¹⁰⁰
One-variable	x <1x10 ¹⁰⁰
Statistical calculation	FREQ <1x10 ¹⁰⁰
Two-variable	x <1x10 ¹⁰⁰
Statistical	y <1x10 ¹⁰⁰
calculation	FREQ <1x10 ¹⁰⁰

 Errors are cumulative in the case of consecutive calculations, this is also true as internal consecutive calculation are performed in the case of x[•], x√y, ³√, x!, nPr, nCr , etc. And may become large.

Order of Operations

This calculator will automatically determine the operation priority of each individual command as follows:-

1st Priority	Recall memory (A, B, C, D, X, Y, M), Ran#
2nd	Calculation within parentheses ().
3rd	Function with parenthesis that request the input
	argument to the right Pol(, Rec(, sin(, cos(, tan(,
	sin-1(, cos-1(, tan-1(, sinh(, cosh(, tanh(, sinh-1(,
	$\cosh^{-1}(, \tanh^{-1}(, \log(, \ln(, e^{(, 10^{(, \sqrt{(, ^3\sqrt{(, Abs(, Rnd(,))})})}))))))$
	RanInt#(
4th	Functions that come after the input value preceded by
	values, powers, power roots:
	x ² , x ³ , x ⁻¹ , x!, °'", °, r, g, ^(, ^x √(, Percent %, x10 ^x
5th	Fractions: a b/c, d/c
6th	Prefix symbol: (–) (negative sign)
7th	Statistical estimated value calculation: x, y, x1, x2
8th	Multiplication where sign is omitted: Multiplication sign
	omitted immediately before π , e, variables (2 π , 5A, π A,
	etc.), functions with parentheses (2√(3), Asin(30), etc.)
9th	Permutations, combinations: nPr, nCr
10th	Multiplication and division: ×, ÷
11th	Addition and subtraction: +, -
12th	Calculation ending instruction: =, M+,M- STO(store memory)

- In the same precedence level, calculations are performed from left to right.
- Operation enclosed within parentheses is performed first. When a calculation contains an argument that is a negative number, the negative number must be enclosed within parentheses.

Example:

(-) **2**
$$x^2$$
 = -4

((-)
$$\mathbf{2}$$
) x^2 = $(-2)^2 = 4$

When same priority commands are mixed into one calculation

Example 1:



Example 2:



Calculation Stacks

- This calculator uses memory areas, called "stacks", to temporarily store numeric value (numbers) and commands (+, -, x,...) according to their precedence during calculations.
- The numeric stack has 10 levels and command stack has 128 levels. A stack error [Stack ERROR] occurs whenever you try to perform a calculation that exceeds the capacity of stacks.
- Calculations are performed in sequence according to "Order of Operations". After the calculation is performed, the stored stack values will be released.

Error Messages and Error locator

The calculator is locked up while an error message is shown on the display to indicate the cause of the error.

- Press CA to clear the error message, then return to the initial display of latest mode.
- Press (or) to display input expression with the cursor positioned next to the error.
- Press on to clear the error message, clear the replay memory history and return to the initial display of the latest mode.

Error Message	Cause	Action
Math ERROR	The intermediate or final result is outside the allowable calculation range. An attempt to perform a calculation using a value that exceeds the allowable input range. An attempt to perform an illogical operation (division by zero, etc.)	Check the input values and make sure they are all within the allowable ranges, Pay special attention to values in any using memory areas
Stack ERROR	The capacity of the numeric stack or operator stack is exceeded.	Simplify the calculation. Divide the calculation into two or more separate parts.
Syntax ERROR	An attempt to perform an illegal mathematical operation.	Press () or () to display the cursor at the location of the error, make appropriate corrections
Insufficient MEM	The calculation result of Function Table mode parameters caused more than 30 x-values to be generated for a table	Narrow the table calculation range by changing the start, end, and step values, and try again.

BASIC CALCULATIONS

- Press MoDE 1 to enter COMP mode.
- During the busy calculation, the calculator shows only the indicators (without any calculation result). You can press A key to interrupt the calculating operation.

Arithmetic Calculations

- To calculate with negative values (exclude the negative exponent) enclose then with parentheses.
- This calculator supports 99 levels of parenthetical expression.

MthIO & MathO MODE : SHIFT SET-UP 1 1

Example in MthIO & MathO mode	Key in operation	Display
(-2.5) ²	((-) 2 • 5) $x^2 =$	$(-2.5)^2$ $\frac{25}{4}$
(4 x 10 ⁷⁵)(-2 x 10 ⁻⁷⁹)	4 ×10° 7 5 X (-) 2 ×10° (-) 7 9 =	4 _{x10} 75x-2 _{x10} -79 -1/1250

Memory Calculations

Memory Variables

- There are 7 memory variables (A D, M, X and Y), which store data, results, or dedicated values.
- Recall memory values by pressing RCL + Memory variable.

Example: 23 + 7 → A (30 store into A), calculate 2 sinA and clear memory A.

MthIO & MathO MODE : SHIFT SET-UP 1 1

Example in MthIO & MathO mode	Key in operation	Display
23 + 7 → A	2 3 + 7 SHIFT	23+7 → A
	STO A	30
2 x sin A = 1	2 sin ALPHA A =	2sin(A
		1
Clear memory	O SHIFT STO A	0 → A
		0

Independent Memory

- Independent memory
 \(^{\text{M}}\) uses the same memory area as variable M. It is convenient for calculating cumulative total by just pressing
 \(^{\text{M+}}\) (add to memory) or
 \(^{\text{M-}}\) (subtract from memory)
- Memory contents are retained even when the calculator is powered off.
- Clear independent memory (M) by pressing 0 SHIFT

Answer Memory

- The input values or the most recent calculation result will be automatically stored into Answer memory whenever you press , SHIFT , MHIFT M., SHIFT M., SHIFT M. Answer memory can hold up to 18 digits.
- Recall and use the latest stored Answer memory by pressing Ans.
- Answer memory is not updated as an error operation had been performed.
- Answer memory contents can be maintained even if pressing CA, changing the calculation mode, or turning off the calculator.

Example in MthIO & MathO mode	Key in operation	Display
123 + 456 → M+,	123+4	Ans ²
Ans ² = 335,241	5 6 M+ x ² =	335241
789900 – Ans =	78990	789900-Ans
454,659	0 — Ans =	454659

Fraction Calculations

The calculator supports Fraction calculation and the conversions between Fraction, Decimal point, Mixed fraction and Improper fraction.

- Specify the fraction calculation result display format by either mixed fraction (■□) or improper fraction (□) in set-up menu.
- At the default setting, fractions are displayed as improper fractions (를).
- Mixed Fraction display result only available after set the (■☐) in the setup menu.

	Improper Fraction (음)	Mixed Fraction (■급)
MthIO Mode	<u>11</u> 3	$3\frac{2}{3}$
LineIO Mode	11_ 3	3_ 2_ 3

- Press s-p to switch a <u>calculation result between fraction and</u> decimal format.
- Press SHIFT (abc-inc) to switch a <u>calculation result between</u> improper fraction and mixed fraction format.
- Result will be displayed in decimal format automatically whenever the total digit of a fractional value (integer + numerator + denominator + separator marks) exceeds 10.
- As a fraction calculation is mixed with decimal value, the result will be displayed by decimal format.
- When fraction calculation in LineO and LineIO mode, the calculation result will be shown in decimal format.

Fraction ← Decimal point conversion

Example in MthIO & MathO mode	Key in operation	Display	
$1\frac{1}{2} + \frac{5}{6} = \frac{7}{3}$	1 SHFT 1 3 2 3 + 5 = 6 =	$1\frac{1}{2} + \frac{5}{6}$	
7/3 ↔ 2.3333333333 (Fraction ↔ Decimal)	S-D	$1\frac{1}{2} + \frac{5}{6}$ 2.3333333333	
2.333333333333333333333333333333333333	SHIFT ^{a kk-dk}	$1\frac{1}{2} + \frac{5}{6}$ $2\frac{1}{3}$	

Percentage Calculations

MthIO & MathO MODE : SHIFT SET-UP 1 1

Example in MthIO & MathO mode	Key in operation	Display	
To calculate 25% of		820x25%	
820	5 SHIFT % =	205	
The percentage of	750÷1	750÷1250%	
750 against 1250	2 5 0 SHIFT %		
		60	

Degree-Minutes-Seconds Calculations

Use degrees (hours), minutes and seconds key to perform a sexagesimal (base-60 notational system) calculation or convert the sexagesimal value into decimal value.

Degree-Minutes-seconds ← Decimal points

Example in MthIO & MathO mode	Key in operation	Display
86°37'34.2" ÷ 0.7 = 123°45'6"	8 6 · · · 3 7 • · · · 3 4 • 2 • · · · ÷ 0 • 7	86°37 ° 34.2 ° ÷ 0.7
		123°45'6"
123°45′6" → 123.7516667	O 1 M	86°37 ° 34.2 ° ÷ 0.7 123.7516667
2.3456 → 2°20'44.16"	2 • 3 4 5	2.3456 2°20'44.16"

Replay & Multi-statements

■ Replay Memory Function

- · Replay memory is only available in COMP mode.
- After the calculation is executed, the calculation input and result will be stored in the replay memory automatically.
- After obtaining the calculation result on the display, press () or () to edit the input expression of that result.
- If the D Indicator is on the right side of a calculation result display, you need to press A and then O or to scroll the calculation.
- · Replay memory is cleared when you press
 - 1. Initialize calculator setting by SHIFT CLR 3 = CA
 - Change from one calculation mode or display mode to other.
 - Press on key.
 - 4. Press Third off to power off machine.

■ Multi-statements Function

- Use a colon ____ to put two or more calculation input together.
- The first executed statement will have "Disp" indicator; and the "Disp" icon will disappeared after the last statement is being executed.

Example in MthIO & MathO mode	Key in operation	Displ	ay
1x12=12 2+25=27 using a multi-statement	1 X 1 2 ALPHA : 2 + 2 5	1x12:2+25	
		1x12	▲ Disp
			12
		2+25	A
			27
Replay the previous calculation history 1 x	⊙	1x12	▼
12 = 12			12

FUNCTIONAL SCIENTIFIC CALCULATIONS

- Press MODE 1 to enter COMP mode.
- π = 3.14159265358979323
- e = 2.71828182845904523

Square, Root, Cube, Cube Root, Power, Power Root, Reciprocal and Pi

MthIO & MathO MODE : SHIFT SET-UP 1 1

Example in MthIO & MathO mode	Key in operation	Display
$\left(\sqrt[3]{2^2+5^3}\right)^{-1}\times\pi$	(SHIFT 1/4 2 X ² + 5 X ³ ())	$\left(\sqrt[3]{2^2+5^3}\right)^{-1}\times\pi$
= 0.6217559776	X-1 X SHIFT # =	0.6217559776
$\left(\sqrt[3]{2^6} + \sqrt[5]{243}\right)$	(SHIFT 1/4 2 X*) 6	$\left(\sqrt[3]{2^6} + \sqrt[5]{243}\right)$
= 7	3 9 1 =	7

Logarithm, Natural logarithm and Antilogarithm

Example in MthIO & MathO mode	Key in operation	Display
e ⁻³ + 10 ^{1.2} + In3 = 16.99733128	SHIFT e ⁿ (-) 3	$e^{-3} + 10^{1.2} + \ln(3$ 16.99733128

Angle Unit Conversion

The calculator angle unit setting is "Degree". Pressing "SHIFT SETUP enter the setup menu to change the unit to "Radian" or "Gradient",:

1:MthIO 2:LineIO 3:De9 4:Rad 5:Gra 6:Fix 7:Sci 8:Norm

Press the corresponding number key 3, 4 or 5 for the angle unit you need. Then the display will show the 0, R, 6 Indicator accordingly.

Convert an angle unit between "Degree", "Radian" and "Gradient" by pressing SHIFT DRGP

1:° 2:r 3:9

Then, pressing $\boxed{1}$, $\boxed{2}$, or $\boxed{3}$ will convert the displayed value into the selected angle unit.

Example in MthIO & MathO mode	Key in operation	Display
Convert 180 degree into radian and gradient	SHIFT SET-UP 4 1 8 O SHIFT DRGP 1 =	180° R 3.141592654
$(180^{\circ} = \pi^{Rad} = 200^{Gad})$	SHIFT SET-UP 5 =	180° 200

Trigonometry Calculations

■ Before using the trigonometric functions (except hyperbolic calculations), select the appropriate angle unit (Deg/Rad/Gra) by pressing ☐ ☐ ☐ .

Angle Unit Setting	Angle Value Input	Input Value Range for √ form result
Deg	Units of 15°	$ \pi < 9 \times 10^9$
Rad	Multiples of $\frac{1}{12}\pi$ radians	$ \pi < 20\pi$
Gra	Multiples of $\frac{50}{3}$ grads	\pi < 10000

■ 90° = $\frac{\pi}{2}$ Radians = 100 Gradients.

Example in MthIO & MathO mode	Key in operation	Display
Degree Mode	SHIFT SET-UP 3	D
sin 60 = 0.8660254038	sin 6 0 =	sin(60 0.8660254038
1 Sin45° = Cosec 45° =	sin 4 5) X ⁻¹	sin(45) ⁻¹
1.414213562		1.414213562

- Hyperbolic (sinh/ cosh/ tanh), Inverse Hyperbolic (sinh-¹/cosh-¹/tanh-¹) functions
- Pressing hyp enter sub-hyperbolic menu.

1:sinh 2:cosh 3:tanh 4:sinh-1 5:cosh-1 6:tanh-1

Example in MthIO & MathO mode	Key in operation	Display
sinh2.5 - cosh 2.5	hyp 1 2 • 5	
= -0.08208499862) — hyp 2 2	sinh(2.5)-cosh(Þ
	• 5) =	-0.08208499862
Cosh-145	hyp 5 4 5 =	cosh ⁻¹ (45
= 4.499686191		4.499686191

Permutation, Combination, Factorials and Random Number Generation

Permutation: $n \Pr = \frac{n!}{(n-r)!}$

Combination: $nCr = \frac{n!}{r!(n-r)!}$

Factorial: x! = x(x-1)(x-2)...(2)(1)

MthIO & MathO MODE : SHIFT SET-UP 1 1

Example in MthIO & MathO mode	Key in operation	Display	
10P3 = 720	1 0 SHIFT nPr 3	10P3	
		720	8
5C2 = 10	5 SHIFT nCr 2 =	5 C 2	
		10	0
5! = 120	5 X! =	5!	
		12	0

■ Random Number Generation

SHIFT Ram#:

: Generate a random number between 0.000 and 0.999. And the display result will be fraction format in Maths mode status.


ALPHA Ramint: Generate a random number between two specified positive integers. The entry is divided by "."

Example in MthIO & MathO mode	Key in operation	Display
Generate a random number between 0.000 & 0.999	SHIFT Ran#	Ran# 283 500
Generate an integer from range of 1 to 100	ALPHA Ranint 1 SHIFT ;	RanInt#(1,100 81

^{*}The value is only a sample, results will differ each time.

Coordinate Conversion

- With polar coordinates, you can calculate and Display θ within −180° < θ ≤ 180° range. (Same as Radian and Gradient)
- In Maths mode, press O or O to scroll the calculation result.
- In Line mode, (x,y) or (r, θ) will be shown over 2 line.
- After conversion, the results will automatically be assigned to memory variables X and Y. Press RCL or to show the results.

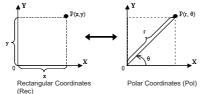

SHIFT POL : Convert rectangular coordinates (x, y) to polar coordinates (r, θ); Press RCL _x for r, or RCL _v for θ.

Key in operation	Display
SHIFT Pol 1 SHIFT ,	Pol(1,√3 r=2,θ=60
RCL X	χ
RCL Y	Υ
	SHIFT Pol 1 SHIFT ; Vi 3 = RCL X

LinelO MODE : SHIFT SET-UP 2

Example in LinelO mode	Key in operation	Display
With Polar coordinate (r=2, θ=60°). Find Rectangular	SHIFT Rec 2 SHIFT .	Rec(2,60 X= 1 Y= 1.732050808
coordinate (x, y) at degree mode	RCL X	X 1
	RCL Y	Υ
		1.732050808

Absolute Value Calculation

MthIO & MathO MODE : SHIFT SET-UP 1 1

Example in MthIO & MathO mode	Key in operation	Display
sin(60 - 5)×(-π)	Abs sin 6 0 —	sin(60 - 5)×(-π)
=2.573442045	5) X ((-)	
	SHIFT T	2.573442045

Engineering Notation

LineIO MODE : SHIFT SET-UP 2

Example in LinelO mode	Key in operation	Display
$1 \div 200 = 5x_{10}^{-3}$	1 ÷ 2 0 0	1÷200
	ENG	5x10 ⁻³
	ENG	1÷200
		5000x10 ⁻⁶
	SHIFT ←	1÷200
		5x10 ⁻³

Display Values Exchange

In MathIO and LineIO mode, pressing S→D to change the calculation result value between fraction form → Decimal form, the other pi and Square root calculation will display a decimal value only.

LinelO MODE : SHIFT SET-UP 2

Example in LinelO mode	Key in operation	Display
$\frac{2}{3} + 2 = \frac{8}{3} = 2.6666666667$	2 = 3 + 2	2_ 3+2
3 3		8_ 3
	S-D	2_ 3+2
		2.666666667

MthIO & MathO MODE : SHIFT SET-UP 1 1

Example in MthIO & MathO mode	Key in operation		Display
$\frac{2}{3} + 2 = \frac{8}{3} = 2.6666666667$	2 * 3 > + 2 =	2/3+2	8/3
	S-D	2/3+2	2.666666667

REMARK

- Some Calculation results, pressing s-D key will not convert the display value.
- · Some display result conversion may take a long time.

STATISTICAL CALCULATIONS

- Press MoDE 2 to enter Statistical calculation mode and "STAT" indicator lights up.
- Press ☐ T (Type) to select the calculation type.

Statistical Type Selection

There are 8 types of Statistical Calculation, after entered the Statistical Type Selection screen, then press the number to select the type of Statistic Calculation.

Pressing Key	Statistical Calculation
1 (1-VAR)	One-variable statistics (x)
2 (A+Bx)	Two-variable, Linear regression (y= A+Bx)
3 (_+Cx2)	Two-variable, Quadratic regression (y=A +Bx + Cx ²)
4 (ln x)	Two-variable, Logarithmic regression (y=AxBlnx)
5 (e^x)	Two-variable, E exponential regression (y=Ae ^{Bx})
6 (A · B^x)	Two-variable, ab Exponential regression (y=ABx)
7 (A · x^B)	Two-variable, Power regression (y=AxB)
8 (1/X)	Two-variable, Inverse regression (Y=A+B/x)

Statistical Data Input

After confirmed the calculation type of the above **Statistical Type Selection** screen or by pressing Selection State of the STAT mode, the following Statistical Data Input screen will be shown.



1-variable STAT



2-variable STAT

- After turned on Data Frequency "FREQ" in calculator's setup menu, the FREQ column will be added into the above screen.
- · The followings are the maximum number of line for data input.

Statistic type	FREQ ON	FREQ OFF	
Single Variable (only x input)	40	80	
2 Variable (x & y input)	26	40	

- Input expression and display result value in Statistical Data Input screen are in Line mode (same as Comp mode with Line mode status).
- After inputted the data, then press to store the value into statistical registers and display the value (max. 6 digits) in the cell. And you can press cursor key to move the cursor between each cell.

Editing Statistical Sample Data

Replacing the Data in a cell

- In Statistical Data Input screen, move the cursor to cell you want to edit.
- (2) Input the new data value or expression, and then press

Deleting a line

- In Statistical Data Input screen, move the cursor to line you want to delete.
- (2) Press DEL

Inserting a line

- In Statistical Data Input screen, move the cursor to the line that will be under the line being inserted.
- (2) Press SHIFT STAT 3 (Edit)
- (3) Press 1 ...

■ Deleting All STAT Data Input

- (1) Press SHIFT STAT 3 (Edit)
- (2) Press 2 (Del-A)

Statistical Calculation Screen

- After inputting the STAT Data, press CA to enter Statistical Calculation screen.
- Statistical Calculation screen are in Line mode for input & output Display
- Use Statistical Menu to calculate the Statistical result. (Sum, Var, MinMax, Reg).

Statistical Menu

In **Statistical Calculation** screen, you can press it is to display the **Statistical Menu** screen.

1:Type 2:Data 3:Sum 4:Var 5:MinMax 1:Type 2:Data 3:Sum 4:Var 5:Re9 6:MinMax

1-variable STAT

2-variable STAT

STAT items	Description
1: Type	To enter the statistical calculation type screen
2: Data	To enter the statistical Data input screen
3: SUM	To enter Sum sub-menu (calculating sum)
4: VAR	To enter Var sub-menu (calculating variable)
5: MinMax (1-Var)	To enter MinMax sub-menu (calculating Min & Max points)
6: MinMax (2-Var)	
7: Reg (2-Var only)	To enter Reg sub-menu (Regression calculation)

Statistical calculation result in Sum, Var, MinMax, Reg

STAT sub-menu	STAT Type	Value	Symbol	Operation
Sum		Summation of all x ² value	Σx ²	SHIFT STAT 3 1
	STAT	Summation of all x value	Σx	SHIFT STAT 3 2
	2-variable	Summation of all y ² value	Σy ²	SHIFT STAT 3 3
	STAT only	Summation of all y value	Σν	SHIFT STAT 3 4
	01711 01119	Summation of xy pairs	Σxy	SHIFT STATE (3) [5]
		Summation of all x ³ value	Σx ³	SHIFT STAT 3 6
		Summation of all x ² y pairs	Σx ² y	SHIFT STAT 3 7
		Summation of all x ⁴ pairs	$\sum x^4$	SHIFT STAT 3 8
Var	1 & 2	Number of data sample	n	SHIFT STAT 4 1
1	variable	Mean of the x values		SHIFT STAT 4 2
	STAT	Population standard deviation of x	xσn	SHIFT STAT 4 3
	0.7.11	Sample sstandard deviation of x	χσ _{n-1}	SHIFT STAT 4 4
	2-variable	Mean of the y values	χο _{Π-1}	SHIFT STAT 4 5
	STAT only	Population standard deviation of y	yσ _n	SHIFT STAT 4 6
	O 1741 Only	Sample standard deviation of y	yσ _{n-1}	SHIFT STAT 4 7
MinMax	1 or 2 variable	, ,	minX	SHIFT STAT 5 1
(1-Var:	STAT	Maximum value of X	maxX	SHIFT STAT 5 2
	2-variable	Minimum value of Y minY Maximum value of Y maxY		SHIFT STAT 6 3
(2-Var:	STAT only			SHIFT STAT 6 4
Reg	For non-Quad	Regression coefficient A A		SHIFT STAT 5 1
	Reg	Regression coefficient B	В	SHIFT STAT 5 2
	_	Correlation coefficient r	г	SHIFT STAT 5 3
		Estimated value of x	â	SHIFT STAT 5 4
		Estimated value of y	ŷ	SHIFT STAT 5 5
Reg	For Quad	Regression coefficient A	А	SHIFT STAT 5 1
	Reg only	Regression coefficient B	В	SHIFT STAT 5 2
		Regression coefficient C	С	SHIFT STAT 5 3
		Correlation coefficient r	г	SHIFT STAT 5 4
		Estimated value of x1	î1	SHIFT STAT 5 5
		Estimated value of x2	î2	SHIFT STAT 5 6
		Estimated value of y	ŷ	SHIFT STAT 6 7

Statistical Calculation Example

1-Var mode Example: To calculate $\sum x^2$, $\sum x$, n, x, σx , Sx, minX, maxX of data: 75, 85, 90, 77, 79 in 1-Var mode (Freq: OFF)

Key in operation	Display
MODE 2	1:1-VAR 2:A+BX 3:_+cX2 4:1n X 5:€^X 6:A•B^X 7:A•X^B 8:1/X
1 (1-VAR)	8
75=85=9 0=77=79 =	* 77 5
CA SHIFT STAT 3 1 =	$\sum x^2$ 33120
CA SHIFT STAT 3 2 =	Σx 406
CA SHIFT STAT 4 1 =	n 5
CA SHIFT STAT 4 2 =	x 81.2
CA SHIFT STAT 4 3 =	σx 5.528109984
CA SHIFT STAT 4 4 =	Sx 6.180614856
CA SHIFT STAT 5 1 =	minX 75
CA SHIFT STAT 5 2 =	maxX 90

Quadratic Regression type Statistical Calculation

Example: ABC Company investigate the effectiveness of the advertisement expense in coded units, the following data were obtained:

Advertisement expenses: X	18	35	40	21	19
Effectiveness: y (%)	38	54	59	40	38

Please use the regression to estimate the effectiveness (estimate the value of y) if the advertisement expenses X=30, and estimate the advertisement expenses level (estimate the value of X_1 , X_2) for effectiveness y = 50.

Key in operation	Display
MODE 2	1:1-VAR 2:A+BX 3:_+cX2 4:1n X 5:@^X 6:A•B^X 7:A•X^B 8:1/X
3 (_+Cx²)	1 ×
18=35=4 0=21=19 = \(\times \) 38=5 4=59=40 = 38=	Y 21 Y 40
CA 3 0 SHIFT STAT 5 6	30ŷ 48.69615715
CA 5 0 SHIFT STAT 5 4	$50\hat{x}_1$ 31.30538226
[CA 5 0 SHIFT STAT 5 5	50\$ ₂ -167.1096731

BATTERY REPLACEMENT

When the display characters are dim or show the follow message on the screen, turn the calculator off and replace the lithium battery immediately.

LOW BATTERY

Please replace the lithium battery using the following procedures,

- Press from to power off the calculator.
- Remove the screw that securely fixes the battery cover in place.
- 3. Remove battery cover.
- Remove the old battery with ball pen or similar sharp object.
- 5. Load the new battery with positive "+" side facing up.
- 6. Replace the battery cover, screw, and press on, shift car.

 3 = CA to initialize the calculator.



Caution: Risk of explosion if battery is replaced by an incorrect type. Dispose of used battery according to the instruction.

Electromagnetic interference or electrostatic discharge may cause the display to malfunction or the contents of the memory to be lost or altered. Should this occur, press ow, SHIFT CR 3 = CA to restart the calculator.

ADVICE AND PRECAUTIONS

- This calculator contains precision components such as LSI chips and should not be used in place subject to rapid variations in temperature, excessive humidity dirt or dust, or exposed to direct sunlight.
- The liquid crystal display panel is made of glass and should not be subjected to excessive pressure.
- When cleaning the device do not use a damp cloth or volatile liquid such as paint thinner. Instead, use only a soft, dry cloth.
- Do not under any circumstances dismantle his device. If you believe that the calculator is not functioning properly, either bring or mail the device together with the guarantee to service representative of Canon Business office.
- Never dispose the calculator improperly such as burning; it can create risks of personal injury or harm.
 You are suggested to dispose this product according to your national law.
- Do replace the battery once very two years even it is not used frequently.

Battery Caution!

- Keep the Battery out of reach of children. If the battery is swallowed, contact a doctor immediately.
- Misuse of battery may cause leakage, explosion, damages or personal injury.
- Don't recharge or disassemble the battery, it could cause a short circuit.
- Never expose the battery to high temperatures, direct heat, or dispose by incineration.
- Never leave a dead battery in the calculator as the dead battery may leak and cause damage to the calculator.
- Continue using the calculator in the low battery condition may have improper operation or the stored memory may be corrupted or lost completely. Keep the written records of important data all the time; and replace the battery as soon as possible.

SPECIFICATIONS

Power Supply : Single Lithium battery (CR2032 x 1)

Power Consumption: DC 3.0V / 0.3mW
Battery Life: Approximately 3 years

(Base on 1 hour operation per day)

Auto power off : Approx. 7 minutes

Usable Temperature : 0° ~ 40°C

Size: 171 (L) × 86 (W) × 18.75 (H) mm (with cover) /

168 (L) × 80 (W) × 14.5 (H) mm (without cover) / Weight: 131 g(with cover) / 94.59 g (without cover)

* Specifications are subject to change without notice.



WARNING

PRODUCT CONTAINS BUTTON/COIN CELL BATTERY

Button/coin cell batteries are hazardous and must be kept out of reach of children at all times, whether new or used. These batteries can cause severe or fatal injuries in 2 hours or less if swallowed or placed inside any part of the body. If it is suspected a button/coin cell battery has been swallowed or placed inside any part of the body, seek medical attention immediately.

MEMO

MEMO

CANON ELECTRONIC BUSINESS MACHINES (H.K.) CO., LTD.

17/F., Tower One, Ever Gain Plaza, 82-100 Container Port Road Kwai Chung, New Territories. Hona Kona



https://ebmhk.canon

CANON AUSTRALIA PTY. LTD.

Building A. The Park Estate, 5 Talayera Road. Macquarie Park, NSW 2113, Australia

Tel: 13 13 83

Web site: canon com au

CANON NEW ZEALAND LTD.

Akoranga Business Park, 28 The Warehouse Way,

Northcote, Auckland 0627, New Zealand

Tel: 0800 222 666 Web site: canon.con.nz

Made in China / Printed in China

E-IE-515