

# Canon



**LS-88V II**  
Calculator / 計算機

<https://global.canon/calmanual>



E-IM-3339

INSTRUCTION **EN**  
使用說明書 **CH**

Calculation / 計算 	Operation / 按鍵操作 	Display / 顯示 12345678
<b>▼ Overflow / 溢出</b>		
1) 123456x7890 =974067840 (ERROR) ↓	123456 <b>×</b> 7890 <b>=</b> 	(E 9.7406784) ( 0.)
2) 99999999 (add to memory) 123 (add to memory)	99999999 <b>M+</b> 123 <b>M+</b> 	( <sup>M</sup> 99999999.) ( <sup>M</sup> E 0.) ( <sup>M</sup> 0.) ( 99999999.)
3) 6 ÷ 0 = 0 (ERROR) ↓	6 <b>÷</b> 0 <b>=</b> 	(E 0.) ( 0.)

## CALCULATION EXAMPLE / 計算實例

Calculation / 計算 	Operation / 按鍵操作 	Display / 顯示 12345678
<b>▼ Mixed / 混合計算</b>		
140-35+22=127	140 <b>-</b> 35 <b>+</b> 22 <b>=</b>	( 0.) ( 127.)
2x23=6	2 <b>×</b> 23 <b>=</b>	( 6.)
-7x9=-63	7 <b>×</b> 9 <b>=</b>	( - 63.)
9+5x3.2+7=12.76	9 <b>+</b> 5 <b>×</b> 3.2 <b>+</b> 7 <b>=</b>	( 12.76)
(2+4)÷3x8.1=16.2	2 <b>+</b> 4 <b>÷</b> 3 <b>×</b> 8.1 <b>=</b>	( 16.2)
<b>▼ Constant / 常數計算</b>		
2+3=5	2 <b>+</b> 3 <b>=</b>	( 5.)
4+3=7	4 <b>+</b> 3 <b>=</b>	( 7.)
1-2=-1	1 <b>-</b> 2 <b>=</b>	( - 1.)
2-2=0	2 <b>-</b> 2 <b>=</b>	( 0.)
5x3=15	5 <b>×</b> 3 <b>=</b>	( 15.)
5x4=20	5 <b>×</b> 4 <b>=</b>	( 20.)
6÷3=2	6 <b>÷</b> 3 <b>=</b>	( 2.)
9÷3=3	9 <b>÷</b> 3 <b>=</b>	( 3.)
<b>▼ Power, Fraction / 分數</b>		
3 <sup>3</sup> =27	3 <b>^</b> 3 <b>=</b>	( 27.)
1/2=0.5	1 <b>÷</b> 2 <b>=</b>	( 0.5)
<b>▼ Square Root / 平方根</b>		
√3=1.7320508	3 <b>√</b>	( 1.7320508)
<b>▼ Percentage / 百分比</b>		
1,200x12%=144	1200 <b>×</b> 12 <b>%</b>	( 144.)
200+(200x20%)=240	200 <b>+</b> 20 <b>%</b>	( 240.)
200-(200x20%)=160	200 <b>-</b> 20 <b>%</b>	( 160.)
<b>▼ Memory / 記憶計算</b>		
3x4= 12	3 <b>×</b> 4 <b>M+</b>	( 0.) ( <sup>M</sup> 12.)
-) 6÷0.2= 30	6 <b>÷</b> 0.2 <b>M+</b>	( <sup>M</sup> 30.)
-18		( <sup>M</sup> -18.)
+ ) 200	200 <b>M+</b>	( <sup>M</sup> 200.)
182	(Recall Memory)	( <sup>M</sup> 182.)
	(Clear Memory)	( 182.)

For Australia only



**WARNING**

**PRODUCT CONTAINS BUTTON/COIN CELL BATTERY**  
Button/coin cell batteries are hazardous and must be kept out of reach of children at all times, whether new or used. These batteries can cause severe injuries if swallowed or placed inside any part of the body. If it is suspected a button/coin cell battery has been swallowed or placed inside any part of the body, seek medical attention immediately.

**CANON ELECTRONIC BUSINESS MACHINES (H.K.) CO., LTD.**

17/F., Tower One, Ever Gain Plaza,  
82-100 Container Port Road, Kwai Chung,  
New Territories, Hong Kong



<https://ebmhk.canon>

**CANON AUSTRALIA PTY. LTD.**

Building A, The Park Estate, 5 Talavera Road, Macquarie Park,  
NSW 2113, Australia  
Tel: 13 13 83  
Website: [www.canon.com.au](http://www.canon.com.au)

**CANON NEW ZEALAND LTD.**

Akoranga Business Park, 28 The Warehouse Way, Northcote,  
Auckland 0627, New Zealand  
Tel: 0800 222 666  
Website: [www.canon.co.nz](http://www.canon.co.nz)

**CANON MARKETING (MALAYSIA) SDN BHD.**


No.6-2-01, Tower 6, UOA Business Park,  
Jalan Pengaturcara U1/51A, Seksyen U1,  
40150 Shah Alam, Selangor


## POWER SUPPLY

This calculator comes with a dual power source, solar cell and alkaline battery. Generally, under normal room lighting, the calculator is powered by a built-in solar cell. When the light level drops below a certain point, it will automatically switch over to battery power. The alkaline battery is long lasting, however the battery life will depend on usage.


(**Note:** Do not attempt to change the battery by yourself. Have a Canon Service Center change the battery for you.)

## AUTOMATIC POWER-OFF FUNCTION

When the power is turned "ON" and none of the keys are pressed for more than **8 minutes**, the calculator turns off automatically to save power. Press  key to re-start the calculator.

■ Electromagnetic interference or electrostatic discharge may cause the display to malfunction or the contents of the memory to be lost or altered. Should this occur, press the  key and re-start your calculation from the beginning.

## OVERFLOW FUNCTIONS

In the following cases, "E" will be shown on the display. The keyboard is electronically locked, and further operation is impossible. Press  key to clear the overflow. The overflow occurs when:

1. The result or the memory content exceeds 8 digits.
2. Dividing by "0".

## SPECIFICATION

Power Source:

Solar cell and Alkaline battery (LR54 x 1)

Usable Temperature: 0°C to 40°C

Dimensions: 90mm (W) x 139mm (L) x 28mm (H)

Weight: 83 g


(Subject to change without notice)


## 電源

本計算機配有兩種電源，太陽能及鹼性電池。鹼性電池的使用壽命完全取決於個人的使用。電池耗盡後，仍可使用太陽能電池給計算器供電。


(注：勿試圖自行更換電池，應請佳能服務中心專業人員為您更換電池。)

## 自動斷電功能

在本機電源處於“ON”（意“開啟”）狀態下時，在八分鐘以上的情況下不按任何鍵，計算器將會自動關閉電源以節電。欲重啟計算器請按  鍵。此時顯示幕上顯示“0”字樣。

■ 電磁干擾和靜電放電會導致顯示異常，或導致記憶內容丟失或被更改。若出現此情況，應按下  鍵重新計算。

## 溢出功能

出現下述情況時，顯示幕上將顯示出“E”字樣。鍵盤被以電子方式鎖定，無法進一步進行計算。按下  鍵可清除溢出。可導致溢出的情況如下：

1. 計算結果或存儲內容超過8位元。
2. 進行除以“0”的計算。

## 規格

電源：太陽能電池及鹼性電池 (LR54 x 1)

工作溫度範圍：0°C 到 40°C

尺寸：

90毫米 (寬) x 139毫米 (長) x 28毫米 (高)

重量：83克

(規格如有改動恕不另行通知)