

CALCULATION EXAMPLE

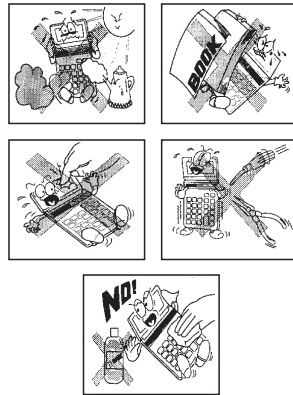 
計算實例

Calculation 	Operation 	Display
▼ Mixed / 混合計算		
140-35+22=127	140 35 + 22	(127.00)
2x2=3=6	2 x 2 = 3	(6.00)
123x45=56=56088	123 x 45 = 6	(56088.00)
-7x9=-63	7 x 9	(-63.00)
9+5x3.2+7-1=11.76	9 + 5 x 3 + 2 + 7 - 1	(11.76)
(2+4)÷3x8.1=16.2	2 + 4 ÷ 3 x 8 + 1	(16.20)
▼ Constant / 常數計算		
2+3=5	2 + 3	(5.00)
4+3=7	4 + 3	(7.00)
1-2=-1	1 - 2	(-1.00)
2-2=0	2 - 2	(0.00)
2x3=6	2 x 3	(6.00)
2x4=8	4 x 2	(8.00)
6÷3=2	6 ÷ 3	(2.00)
9÷3=3	9 ÷ 3	(3.00)
▼ Power, Fraction / 分數		
3 ⁴ =81	3 x x x	(81.00)
1/5=0.2	1 ÷ 5	(0.20)
1/(2x3+4)=0.1	2 x 3 + 4 ÷	(0.10)
▼ Square Root / 平方根		
√3=1.73205080756	3	(1.73205080756)
▼ Add Mode / 附加模式計算		
\$12.55+\$15.75-\$5.30=\$23.00	1255 + 1575 - 530	(23.00)
▼ Floating Mode / 浮動計算		
8÷3x3.7+9=18.8666666666	8 ÷ 3 x 3 + 7 + 9	(18.8666666666)
▼ Round-Down / 向下圓正		
11÷3=3.6666666666	11 ÷ 3	(3.66)
▼ Round-Off / 四舍五入		
11÷3=3.6666666666	11 ÷ 3	(3.67)
▼ Percentage / 百分比		
1200+(1200x17.5%)=1,410	1200 + 17 %	(1410.00)
1200-(1200x17.5%)=990	1200 - 17 %	(990.00)

▼ Memory / 記憶計算		(0.)
3x4= 12	3 x 4	(M 12.00)
→) 6+0.2= 30	6 + 0.2	(M 30.00)
-18		(M -18.)
+) 200	200	(M 200.00)
182		(M 182.)
		(182.)
▼ Grand Total / 總計計算		(0.)
500x3=1,500	500 x 3	(GT 1'500.00)
100x2= 200	100 x 2	(GT 200.00)
+) 60x3= 180	60 x 3	(GT 180.00)
1,880		(GT 1'880.)
		(1'880.)
▼ Overflow / 溢出		(E 9.74074065210)
1) 123456789x78900	123456789 x 78900	(9.74074065210)
=9740740652100		(9.74074065210)
(ERROR)		(0.)
2) 6÷0=0	6 ÷ 0	(E 0.)
(ERROR)		(0.)

TAKING CARE OF YOUR CALCULATOR

操作注意事項



CANON ELECTRONIC BUSINESS MACHINES (H.K.) CO., LTD.

17/F., Ever Gain Plaza, Tower One, 82-100 Container Port Road, Kwai Chung, New Territories, Hong Kong

CANON HONG KONG COMPANY LTD.

19/F., The Metropolis Tower, 10 Metropolis Drive, Hunghom, Kowloon

CANON MARKETING (MALAYSIA) SDN BHD.

Block D, Peremba Square, Saujana Resort, Section U2,

40150 Shah Alam, Selangor Darul Ehsan, Malaysia

SOLID BUSINESS MACHINES CENTER INC.

Suite 303, Singson Building Plaza Moraga, Binonda, Manila, Philippines

WELLTECH GROUP CO. LTD.

13/27, 15/28, Moo 9 Kaset-Naramintra Road, Klongkum, Bangkok,

Bangkok 10230, Thailand

DAI PHONG TRADING CO., LTD.

A25 Cao Thang Prolong St., Ward 12, Dist. 10 HCMC, Vietnam

Tel : 848-8622449 ~ 451 Fax : 848-2650603

E-mail : nguyen.thanh.tam@abico.com.vn Website : http://www.abico.com.vn


ENGLISH



POWER SUPPLY

This calculator comes with a dual power source, solar cell and lithium battery.


The duration of lithium battery depends entirely on individual usage.

(Note: Do not attempt to change the battery by yourself. Have a Canon Service Center change the battery for you.)


■ Electromagnetic interference or electrostatic discharge may cause the display to malfunction or the contents of the memory to be lost or altered. Should this occur, Press  key and restart your calculation from the beginning.

 **Decimal Point Selector Key:** Used for designating the decimal point position for calculation result. Each time  is press, the decimal point indicator will be shifted between 0 2 3 A. Floating calculation are performed when there is no indicator on LCD display.

 
A (Add-mode): Addition and subtraction are performed with an automatic 2-digit decimal. It is convenient for currency calculation.

 **Rounding key:** Used for rounding the result to a pre-selected number of decimals. The round-down function are performed when there is no indicator on LCD display.

AUTOMATIC POWER-OFF FUNCTION

When the power is turned "ON" and none of the keys are pressed for more than **7 minutes**, the calculator turns off automatically to save power. Press  key to re-start the calculator. "0" will appear in the display.

OVERFLOW FUNCTIONS

In the following cases, "E" will be shown on the display. The keyboard is electronically locked, and further operation is impossible. Press  key to clear the overflow. The overflow occurs when:

1. The result or the memory content exceeds 12 digits.
2. Dividing by "0".

SPECIFICATION

Power Source: Solar cell and Lithium battery (CR2032 X 1)

Usable Temperature: 0°C to 40°C (32°F to 104°F)

Dimensions: 105mm (W) x 140mm (L) x 32mm (H) / 4-9/64" (W) x 5-33/64" (L) x 1-17/64" (H)

Weight: 124g (4.37 oz)


(Subject to change without notice)


 
中國語

電源

 
本計算機配有雙電源—太陽能及鋰性電池。鋰性電池的使用壽命完全取決於個人的使用情況。

(注：勿試圖自行更換電池，應請佳能服務中心專業人員為您更換電池。)


■ 電磁干擾和靜電放電會導致顯示異常，或導致記憶內容丟失或被更改。若出現此情況，應按下  鍵重新計算。

 **小數點選擇鍵：**用于選定演算結果的小數點位置。每當按下  鍵，小數點顯示將被轉移至 0 2 3 或 A 之間。但當執行浮動演算時，在 LCD 屏幕上並沒有任何顯示。


A (加模式)：自動以 2 位小數執行加法和減法，便于貨幣計算。

 **四舍五入鍵：**用于對計算結果四舍五入到預先選擇的小數數位。當選擇向下圓正的演算時，在 LCD 屏幕上並沒有任何顯示時。

自動斷電功能

在本機電源處於 "ON" (意 "開啟") 狀態下時，在 **七分**鐘以上的情況下不按任何鍵，計算機將會自動關閉電源以節電。欲重啟計算機請按  鍵。此時顯示幕上顯示 "0" 字樣。

溢出功能

出現下述情況時，顯示幕上將顯示出 "E" 字樣。鍵盤被以電子方式鎖定，無法進一步進行計算。按下  鍵可清除溢出。可導致溢出的情況如下：

1. 計算結果或存儲內容超過 12 位元。
2. 進行除以 "0" 的計算。

規格

電源：太陽能電池及鋰性電池 (CR2032 x 1)
工作溫度範圍：0°C 到 40°C (32°F 到 104°F)
尺寸：

105 毫米 (寬) x 140 毫米 (長) x 32 毫米 (高)

重量：124 克

(規格如有改動恕不另行通知)

